Overlay pump maintenance instructions

Proceed only if the Overlay is losing pressure

Instruction video

Click here

① Read maintenance precautions below

- ⓘ **Do not press the integrated pump or valve while the Overlay is submerged in water.**
- ⓘ Only **isopropyl alcohol** should be used. At least 70% alcohol, also known as rubbing alcohol, available in most pharmacies.
- ⓘ When using alcohol, submerge only the tip of the integrated pump (the part with the hole).

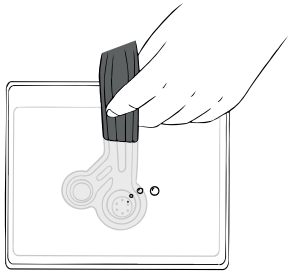

② Inflate the Overlay fully. Then submerge the pump in water and observe carefully.

If no air bubbles come from the pump after 1 minute, or if bubbles appear elsewhere on the product, please contact us at: clinics@ethnocare.ca

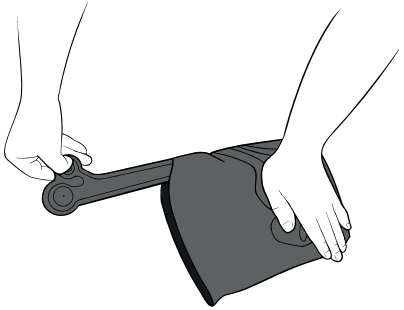

③ Remove the Overlay from water and deflate it completely.

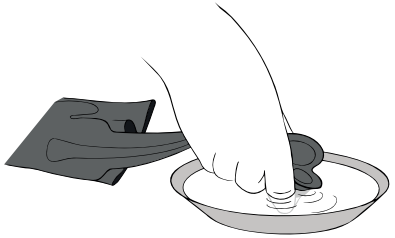

④ Submerge only the tip of the pump (the part with the hole) into isopropyl alcohol.

Then pump a small amount of alcohol into the Overlay.

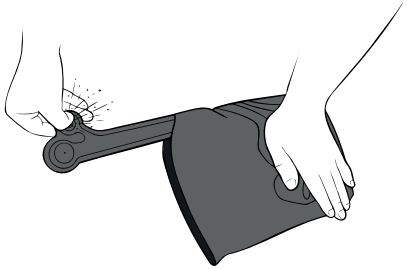

⑤ Release the excess alcohol by pressing on the valve

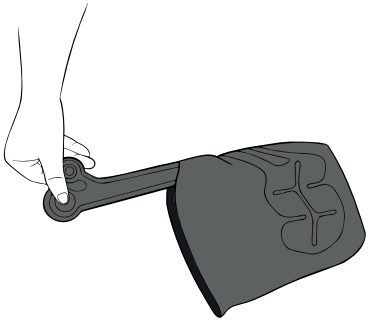

⑥ Inflate the Overlay using the integrated pump.

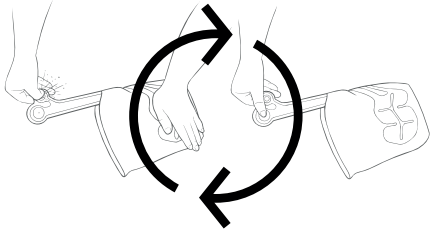

⑦ Repeat steps 5 and 6 a few times to remove all remaining alcohol from inside the bladders.

For Overlay TT and TF

ETHNOCARE

Instructions de maintenance de la pompe

À effectuer uniquement si l'Overlay perd de la pression

Vidéo explicative

Cliquer ici

① Voir les précautions d'entretien ci-dessous

- ⓘ **Ne pas appuyer sur la pompe intégrée ou la valve lorsque l'Overlay est immergé dans l'eau.**
- ⓘ Seul de l'alcool isopropylique doit être utilisé. Utiliser de l'alcool à au moins 70 %, également appelé alcool à friction, que l'on trouve dans la plupart des pharmacies
- ⓘ Lors de l'utilisation de l'alcool, immerger uniquement l'extrémité de la pompe intégrée (la partie avec le trou).

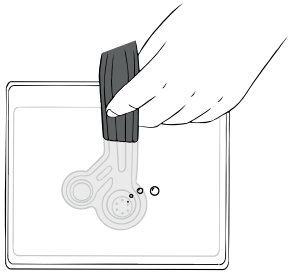

② Gonfler l'Overlay. Ensuite, plonger la pompe dans l'eau et observer attentivement.

Si aucune bulle d'air ne sort de la pompe après 1 minute, ou si des bulles apparaissent à un autre endroit, veuiller nous contacter à: clinics@ethnocare.ca

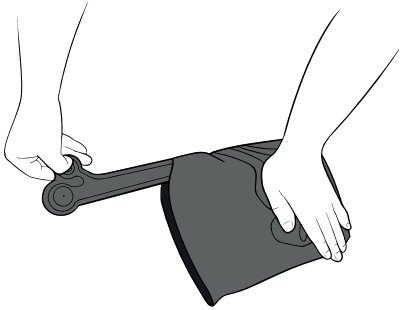

③ Retirer l'Overlay de l'eau et dégonfler-le complètement.

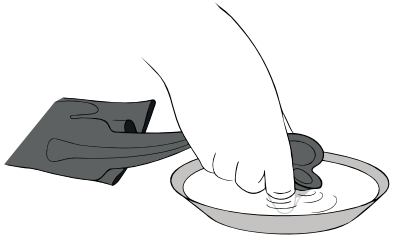

④ Immerger uniquement l'extrémité de la pompe (la partie avec le trou) dans de l'alcool isopropylique.

Ensuite, pomper une petite quantité d'alcool à l'intérieur de l'Overlay.

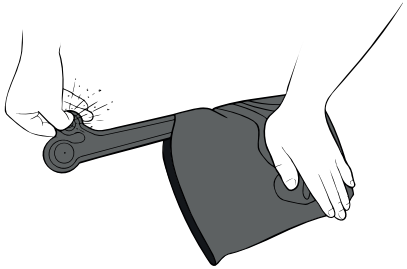

⑤ Évacuer l'alcool en trop en appuyant sur la valve.

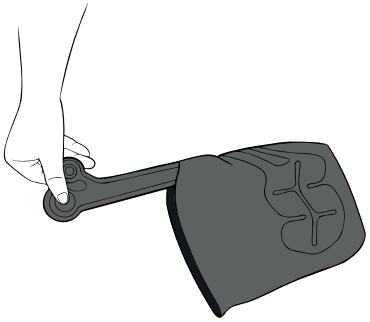

⑥ Gonfler l'Overlay à l'aide de la pompe intégrée.

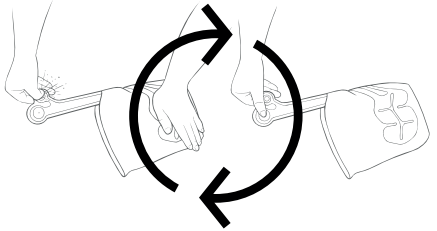

⑦ Répéter les étapes 5 et 6 plusieurs fois pour évacuer l'alcool restant des cellules.

Pour l'Overlay TT et TF

ETHNOCARE